



# INSTRUCTIONS

-J05399

REV. 2011-05-02

## SOFTAIL HARDWARE KIT FOR CHROME TIE-DOWN BRACKETS

### GENERAL

#### Kit Number

91800030

#### Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).

#### Additional Parts Required


This Softail hardware kit (Part Number 91800030) is required for installation of Chrome Tie-down Brackets.

Required for installation of Chrome Tie-Down Bracket Kit (Part Number 93500006) on '00-later FLSTF/B models without a windshield.

#### Kit Contents

See Figure 1 and Table 1.

### SERVICE PARTS

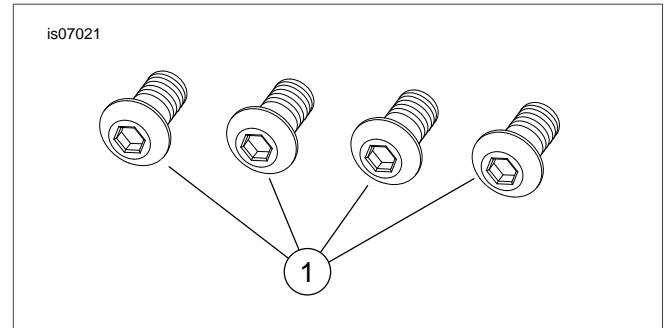

**Figure 1. Service Parts: Softail Tie Down Bracket Hardware Kit**

**Table 1. Softail Tie Down Bracket Hardware Kit**

Description (Quantity)	Part Number
Button head screw, 5/16-24 x 0.625 (4)	91800030

