



INSTRUCTIONS

-J05680

2012-09-10

SADDLEBAG GUARD BAG

GENERAL

Kit Number

93300060, 93300061, 93300062, 93300063

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Kit Contents


There are no Service Parts available with this kit.

INSTALLATION

▲ WARNING

Improper loading of cargo or installation of accessories can affect motorcycle stability and handling, which could result in death or serious injury. (00099a)

- Keep cargo weight concentrated close to the motorcycle and as low as possible to minimize change in the center of gravity.
 - Distribute weight evenly on both sides of the vehicle.
 - Do not load bulky items too far behind the rider or add weight to the handlebars or front forks.
 - Recommended load: 1.4 kg (3 lb) per guard bag.
1. See the owner's manual. Remove the appropriate saddlebag.
 2. See Figure 1. Install bag on saddlebag guard, using the appropriate snap set.
 3. See the owner's manual. Install the saddlebag.

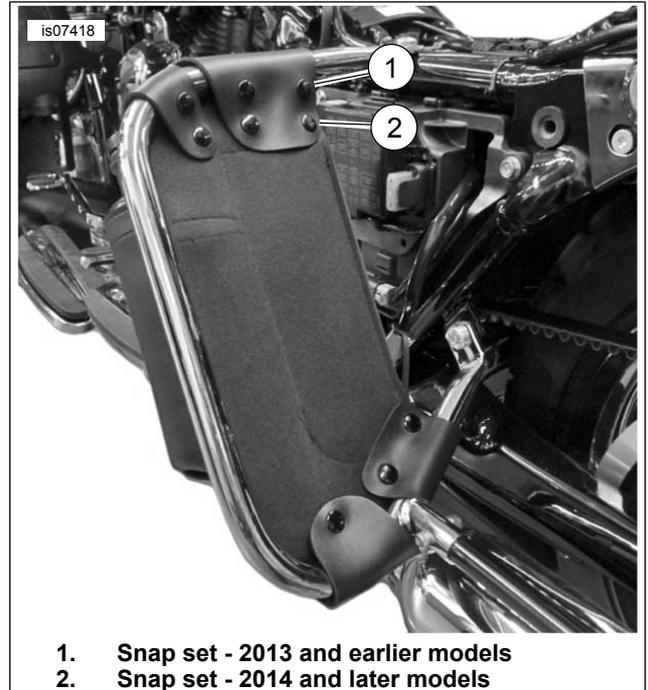

1. Snap set - 2013 and earlier models
2. Snap set - 2014 and later models

Figure 1. Saddlebag Guard Bag

