



# INSTRUCTIONS

-J01041

REV. 12-18-2000

Kit Number 94139-01

## CHROME FOOTPEG HARDWARE KIT

### General

This kit is designed to fit all male mount style footpegs.

See Service Parts illustration below for items contained in this kit.

### Installation

#### NOTE

A Service Manual for your motorcycle is available at your Harley-Davidson Dealer.

#### WARNING

The screws supplied in this kit are designed for a one-time installation only. If this kit is removed after initial installation, you must re-apply Loctite 243 (Blue) to the threads of the screws. Failure to re-apply Loctite to screw threads when re-installing footpegs may cause footpegs to come loose or fall off leading to loss of control of vehicle resulting in death or serious injury.

#### NOTE

The spring washer, Part No. 50912-72, should be saved and reused. If the spring washer is missing or damaged, it should be replaced. A new washer is available from your Harley-Davidson dealer.

1. Remove existing nut, spring washer, and screw securing footpeg to passenger footrest support. Discard nut and screw.
2. See Service Parts illustration. Install screw through passenger footrest support, spring washer, and footpeg. Verify that the spring washer is positioned inside the footpeg support with the square edge towards the inside of the support.
3. Install nut to screw. Tighten hardware to 10-16 ft-lbs.
4. Perform procedures 1 through 3 for the opposite side.




## Service Parts

Part No. 94139-01

Date 12/00

Chrome Footpeg Hardware Kit

103404.eps

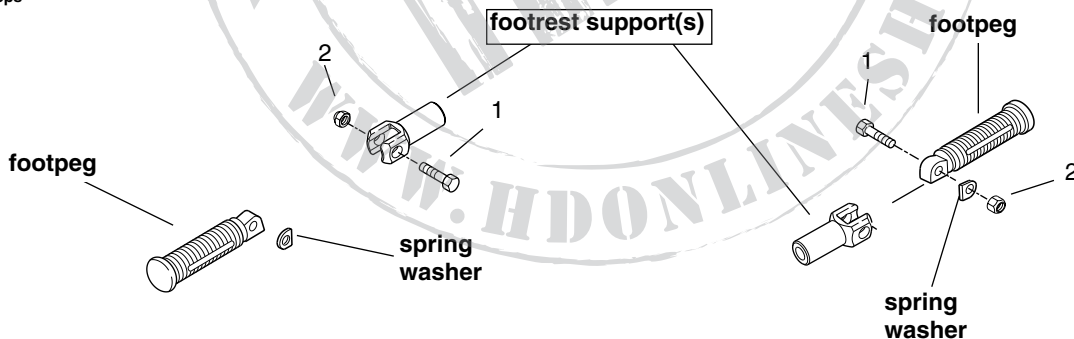

Item	Description	Part No.
1	Screw, hex head, chrome	Not sold
2	Lock nut	94030-92T