



INSTRUCTIONS

-J02995

REV. 9-08-04

Kit Number 94204-03A

VROD FRAME BAG KIT

General

This kit is designed to fit all VRSC® model motorcycles.

Kit Contents

Qty	Description	Part Number
1	Bag, frame	94204-03
3	Protectors, frame	Not sold
1	Protectors, frame 1.5 x 7.0 in. strip	Not sold

Installation

1. See Figure 1. On left side of frame below seat, position frame bag and note the areas where Velcro straps will wrap around frame tubes (1). Obtain the 3 protective strips from kit. Peel off adhesive backing and place strip at each of the frame tube locations.

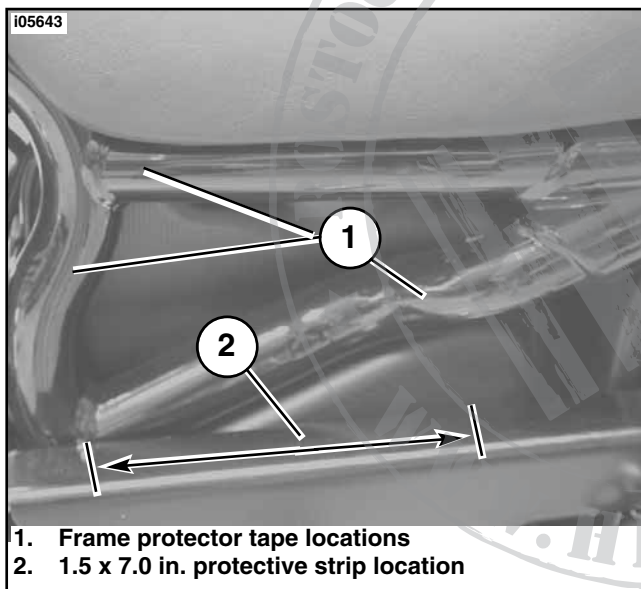


Figure 1. Install Protective Tape

3. See Figure 2. Position frame bag (1) with Harley-Davidson shield "up" (2) and wrap each of the Velcro straps (3) around the corresponding frame tube.

NOTE

Maximum Capacity of the Frame Bag is 2.3 lbs. Do not exceed the recommended weight.

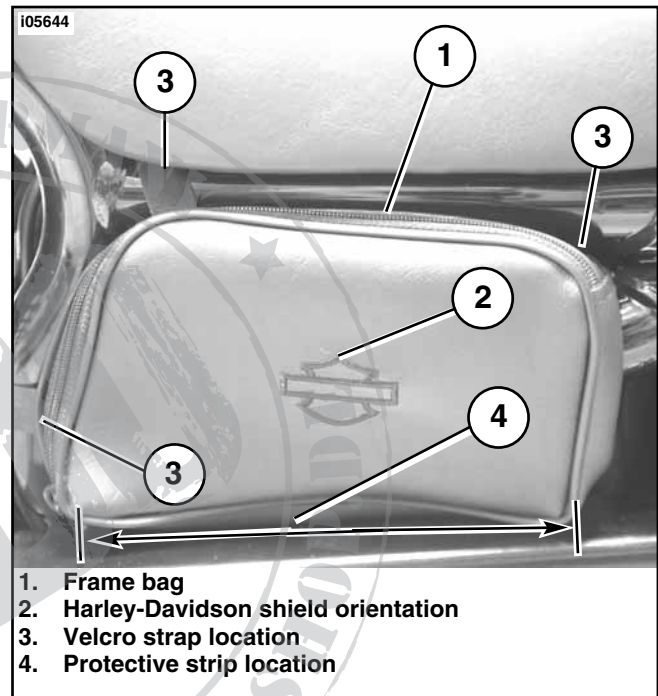


Figure 2. Install Frame Bag to Frame Tubes

2. Obtain the 1.5 in. x 7.0 in. protective strip from kit, peel off adhesive backing and apply to chrome belt guard as shown (2).