



INSTRUCTIONS

-J01143

REV. 11-20-01

Kit Numbers 94612-98, 94617-98, 94618-98, 94626-98

TRUNK MOUNT FLAG KITS

General

This kit is designed to fit any model motorcycle with a Tour-Pak and/or hard (fiberglass) saddlebags.

NOTE

Flags are not intended for highway use. The construction of these flags will not hold up to the wind speeds seen at highway speeds. These flags are designed for parade use only.

Kit Contents:

Description (Qty)	Part Number
Wear pads (2)	Not sold separately
Flag mast	Not sold separately
Flag	Not sold separately
Rubber pads	Not sold separately

Installation

CAUTION

Water may enter Tour-Paks/saddlebags with flag mast installed during inclement weather.

CAUTION

Attaching a flag mast to a Tour-Pak or saddlebag without wear pads in place may result in damage to the Tour-Pak or saddlebag exterior. Periodically check to ensure the flag mast remains in contact with wear pads.

1. See Figure 1. Remove adhesive backing from wear pad and place on area where mast base will hit the painted portion of the Tour-Pak and/or saddlebag. Attach flag mast to Tour-Pak or saddlebag as shown.

CAUTION

Attaching flag mast to Tour-Pak or saddlebag without rubber pads in place may result in damage to exterior of Tour-Pak or saddlebag.

2. Cut the self adhesive rubber pad in half. Remove the backing from the rubber pads and place on the inside of the Tour-Pak or saddlebags on each side of the flag mast as shown.



Figure 1. Flag mast installed on Tour-Pak

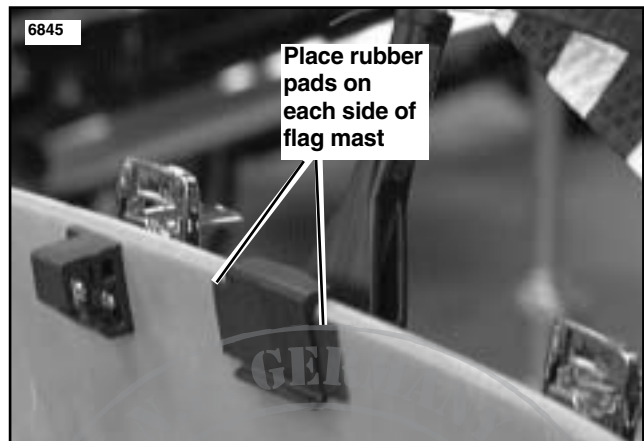


Figure 2. Rubber pads installed on interior of Tour-Pak

