



## TEAR DROP TIE-DOWN BRACKETS, '14-UP TOURING

### 949

THANK YOU FOR CHOOSING KÜRYAKYN!

**PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.**

	<b>THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.</b>
	<b>This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.</b>
	<b>This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.</b>

### MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Right Tie-Down
- 1 Left Tie-Down
- 1 Hardware Kit containing:
  - 4 5/16"-18 X 1-1/2" Button Socket Head Screw
  - 4 5/16" Flat Washer
  - 4 Tie-Down Spacer
- 1 Installation Instructions

### TOOLS SUGGESTED:

Set of Torx drivers, set of hex wrenches, blankets/service covers

**NOTICE** These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.


**NOTICE** Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

**STEP 2** Remove the two existing screws securing the Right-side light bar to the motorcycle; set them aside, they will not be reused.

**Secure the light bar while removing the screws to prevent it from falling.**

**If another person is available to help hold items, the installation will be easier.**

**STEP 3** Refer to **PIC 1**. Separate the lighting connector; set the light bar aside for now.

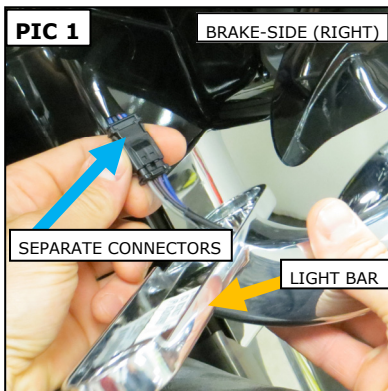

**CUSTOMER SERVICE**  
877.370.3604 (toll free)

**INSTALLATION QUESTIONS**  
techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, maintained and operated under normal conditions.
  - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
  - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn  
454 County Road V V  
Somerset, WI 54025-9031  
Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



**STEP 4** Refer to **PIC 2**. Locate the included Right Tie-Down, two (2) Tie-Down Spacers, two (2) Flat Washers, and two (2) Screws.

**STEP 5** Place the included Washers over the Screws; set within arms reach of the work area.  
Place the two Tie-Down Spacers in the recesses on the back side of the light bar as shown in **PIC 3**.




**STEP 6** Refer to **PIC 3**. Holding the Tie-Down up to the motorcycle, route the connector and wiring through the slot.  
Position the light bar horizontally (so the Spacers remain in the recesses) near the Tie-Down and reconnect the connectors.

**STEP 7** Position the Tie-Down over the backside of the light bar to "sandwich" the Spacers inside.

**STEP 8** Refer to **PIC 4**. Align the Tie-Down/light bar holes with the motorcycle and insert the two Screws with Washers; start both Screws in their threads before fully tightening them.  
Ensure that the wiring is safely routed in between the Tie-Down and light bar before fully tightening the screws.

**STEP 9** Tighten the screws.

**STEP 10** Repeat **STEPS 2 through 9** for the Left-side.

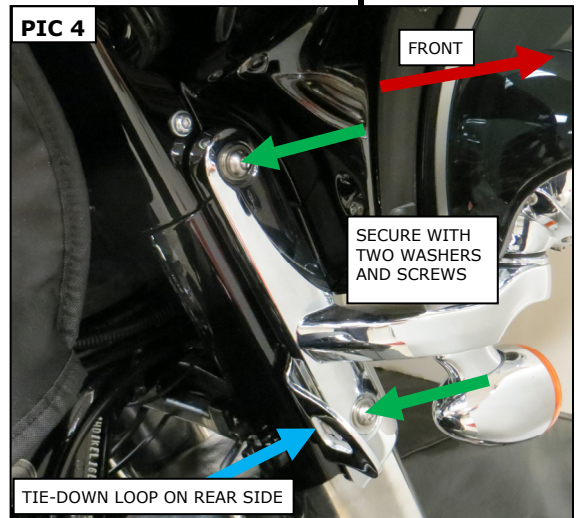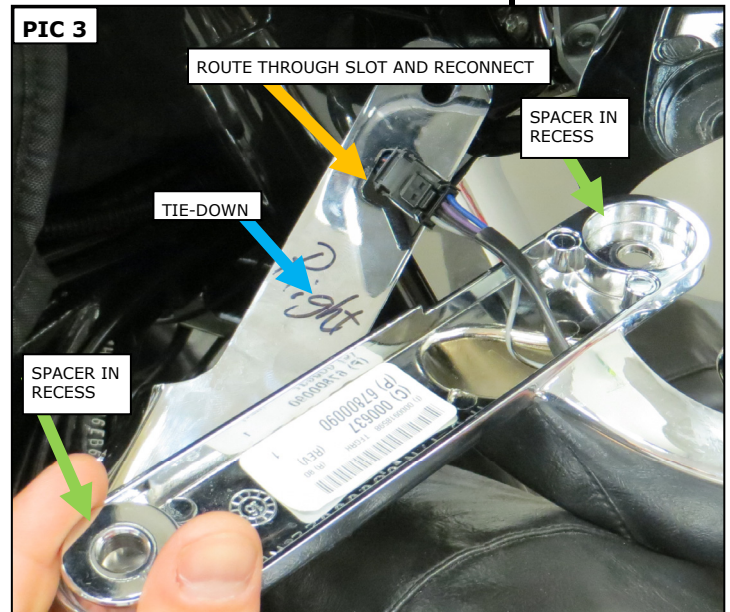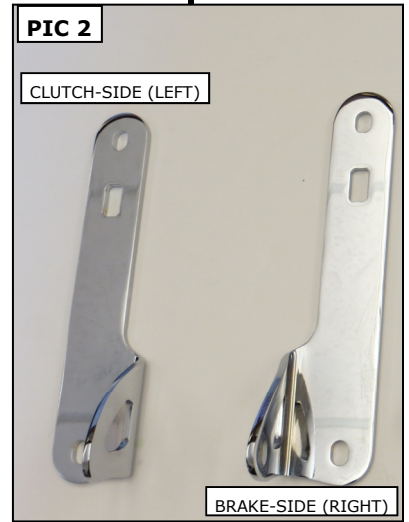

**NOTICE**

**It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.**

**NOTICE**

**Use only good quality RATCHET-type tie-down straps to secure you motorcycle. Ensure the straps have a weight rating sufficient to support your motorcycle.**

**DO NOT USE straps that have tears, worn seams, cuts, abrasions, bent hooks, faulty ratchets, or unknown weight ratings to secure a motorcycle.**

**Use only good quality wheel chocks designed for your type of motorcycle.**

**Follow wheel chock manufacturer's recommendations for securing your motorcycle to the trailer or motorcycle lift.**

Condor brand wheel chocks (Kuryakyn Part Number 920 or 922) are sold separately through Kuryakyn.com or your Kuryakyn dealer.

*Ride On!*