

**MEM-9888**  
**LOW PROFILE INDEPENDENT LOWERS HARDWARE KIT FOR EXPOSED**  
**FORKS 35-43MM**

**TOOLS REQUIRED:** 3/16" Allen wrench (provided)

1. Cover the front fender with a towel, in case you drop something.


**Note:** The neoprene washer has been replaced by four Santoprene grommets. The rubber grommets should be inserted through the holes in the windshield so that the flat round part of the grommet lays flat on each side of the windshield.

2. Attach the lowers plastic to the lowers mounting plates using the pre-assembled bolts and button nuts. Install the components in the order shown in **Figure 1**.
3. The mounting plate tabs should point away from each other when installed correctly. (see **Figure 2**)


**Note:** The mounting plates can be mounted pointing up, for those applications where the windshield is too short to reach them other wise

4. Loosely install the two fork clamps onto the forks. **MAKE SURE THE LOWERS WILL CLEAR ALL FENDERS, RADIATORS, OIL COOLERS, ETC. WHEN INSTALLED.** Attach the lowers mounting plates to the fork clamps. Adjust height, angle and position of the clamps and then tighten them.

**Fig. 1 Order of assembly**

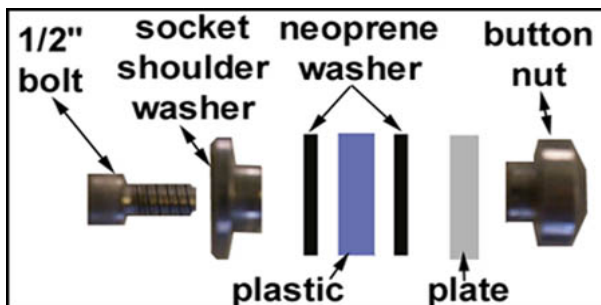

**Fig.2 Position of plate tabs**

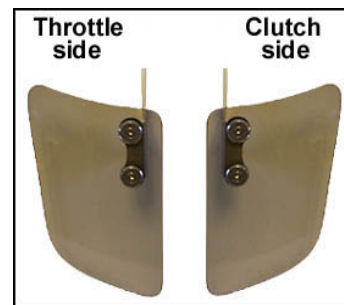

**CARE AND CLEANING**

To clean your windshield, wash it with warm water and a mild, non-abrasive, dishwashing liquid. Use a soft cloth such as a T-shirt or flannel cloth.

To protect your windshield, use NOVUS #2 to remove minor scratches, or use Memphis Shades Shinola polish specially designed for plastic. NEVER use glass cleansing agents, they may cause severe damage to your windshield.

Never use any petroleum-based chemicals, or cleaning agents with ammonia.

**MEM9888 MOUNTING KIT**  
**INDEPENDENT LOWERS FOR 35-43MM FORKS**

<b>PART #</b>	<b>DESCRIPTION</b>	<b>QTY.</b>
<b>M888</b>	<b>INSTRUCTION SHEET /PARTS LIST</b>	<b>1</b>
<b>S1085</b>	<b>LOWERS MOUNTING BRACKET LEFT SUB-ASSEMBLY</b>	<b>1</b>
<b>S1086</b>	<b>LOWERS MOUNTING BRACKET RIGHT SUB-ASSEMBLY</b>	<b>1</b>
<b>S1074</b>	<b>SMALL ADJ. FORK CLAMP SUB-ASSEMBLY</b>	<b>2</b>
<b>M313</b>	<b>3/16" ALLEN WRENCH HOLDER (CAP)</b>	<b>1</b>
<b>M310</b>	<b>3/16" SHORT ARM ALLEN WRENCH</b>	<b>1</b>

**Memphis Shades warrants all product components, metal and plastic,  
against defects in materials and workmanship for 24 months.**

**FOR PARTS AND WARRANTY HELP, CONTACT:**

MEMPHIS SHADES  
P.O. Box 429  
Rossville, TN 38066  
(901) 853-0293

Visit us on the web at [www.memphisshades.com](http://www.memphisshades.com) or  
you can also reach us at  
customerservice@memphisshades.com