



INSTRUCTIONS

-J01420

REV. 9-23-98

Kit Numbers 58652-97A and 58653-97A

DETACHABLE KING SIZE WINDSHIELD FOR SOFTAIL MODELS WITH CHROME HEADLAMP NACELLE OR STREET STALKER HEADLAMP NACELLE (WITHOUT PASSING LAMPS)

General

These windshield kits are designed for Softail models that have Chrome Headlight Nacelle Kit (Part No. 67907-96) or Street Stalker Headlight Nacelle Kit (57910-98B) installed:

58653-97A Low Profile, Smoked

58652-97A Standard Height, Clear

See Service Parts illustration for kit contents.

Installation

1. Remove upper screws that attach the chrome headlamp nacelle to the front forks.
2. See Service Parts illustration. Attach the upper docking bushings (22) using washer (21) and mushroom head screws (20) Use Loctite 242 (blue) on screw threads. Torque screws to 19 ft-lbs (25.8 Nm).
3. Remove lower screws that attach the chrome headlamp nacelle to the front forks.
- 4a. For vehicles equipped with the Chrome Headlamp Nacelle, attach the lower docking bushing (22) using washer (21) and button head screw (23).
- 4b. For vehicles equipped with the Street Stalker Headlamp Nacelle, attach the lower docking bushing (22) using washer (21) and button head screw (24).

Installing/Removing Windshield

1. Carefully lock bottom windshield assembly jaws into grooves of the lower rubber docking bushings.
2. Hook the top windshield assembly jaws into grooves of the upper rubber docking bushings.
3. Firmly press the windshield into place until seated on docking bushings.
4. To remove windshield, grab windshield edges on each side of center brace and firmly pull windshield loose from docking bushings.

WARNING

Carefully inspect windshield upon completion of installation. Be sure windshield mounting does not restrict full left or full right movement of front fork assembly. Restricted movement could affect handling, resulting in personal injury. If restriction does occur, adjust windshield as needed until proper clearance is obtained.

Have experienced Harley-Davidson service personnel correct any problems before riding with this accessory installed.

CAUTION

Check mounting hardware periodically. Never ride with loose mounts. A loose mounting causes extra stress on all other mounts, as well as the windshield itself, and could result in premature failure of either or both.

CAUTION

Do not clean Lexan® polycarbonate in hot sun or high temperature. Powdered, abrasive or alkaline cleanser will damage the windshield. Never scrape the windshield with a razor blade or other sharp instruments because permanent damage will result.

Sunlight reflections off of the inside curvature of a windshield can, at certain times of the day, cause extreme heat build-up on motorcycle instruments. Exercise care in parking. Park facing the sun, place an opaque object over the instruments, or adjust the windshield to avoid reflections.

Harley-Davidson windshields are made of Lexan®. Lexan® is a more durable and distortion-resistant material than other types of motorcycle windshield material, but still requires attention and care to maintain.

- Do not use liquid windshield “protectors” on your windshield. Although they may work well on automobile safety glass, Harley-Davidson cannot ensure the results when used on Lexan® Harley-Davidson windshields. If you want to use a windshield protectant on your windshield, try Harley Glaze Polish and Sealant®.
- Do not use benzine, paint thinner, gasoline, or other types of harsh cleaning agents on windshield. They will damage the windshield surface.
- Do not use benzine, paint thinner, gasoline, lubricants (including Armorall), or other cleaning agents on the rubber bushings. They will damage the bushing surfaces.




Service Parts

Part No. 58652-97A

Date 9-98

Detachable King Size Windshield

sp58652

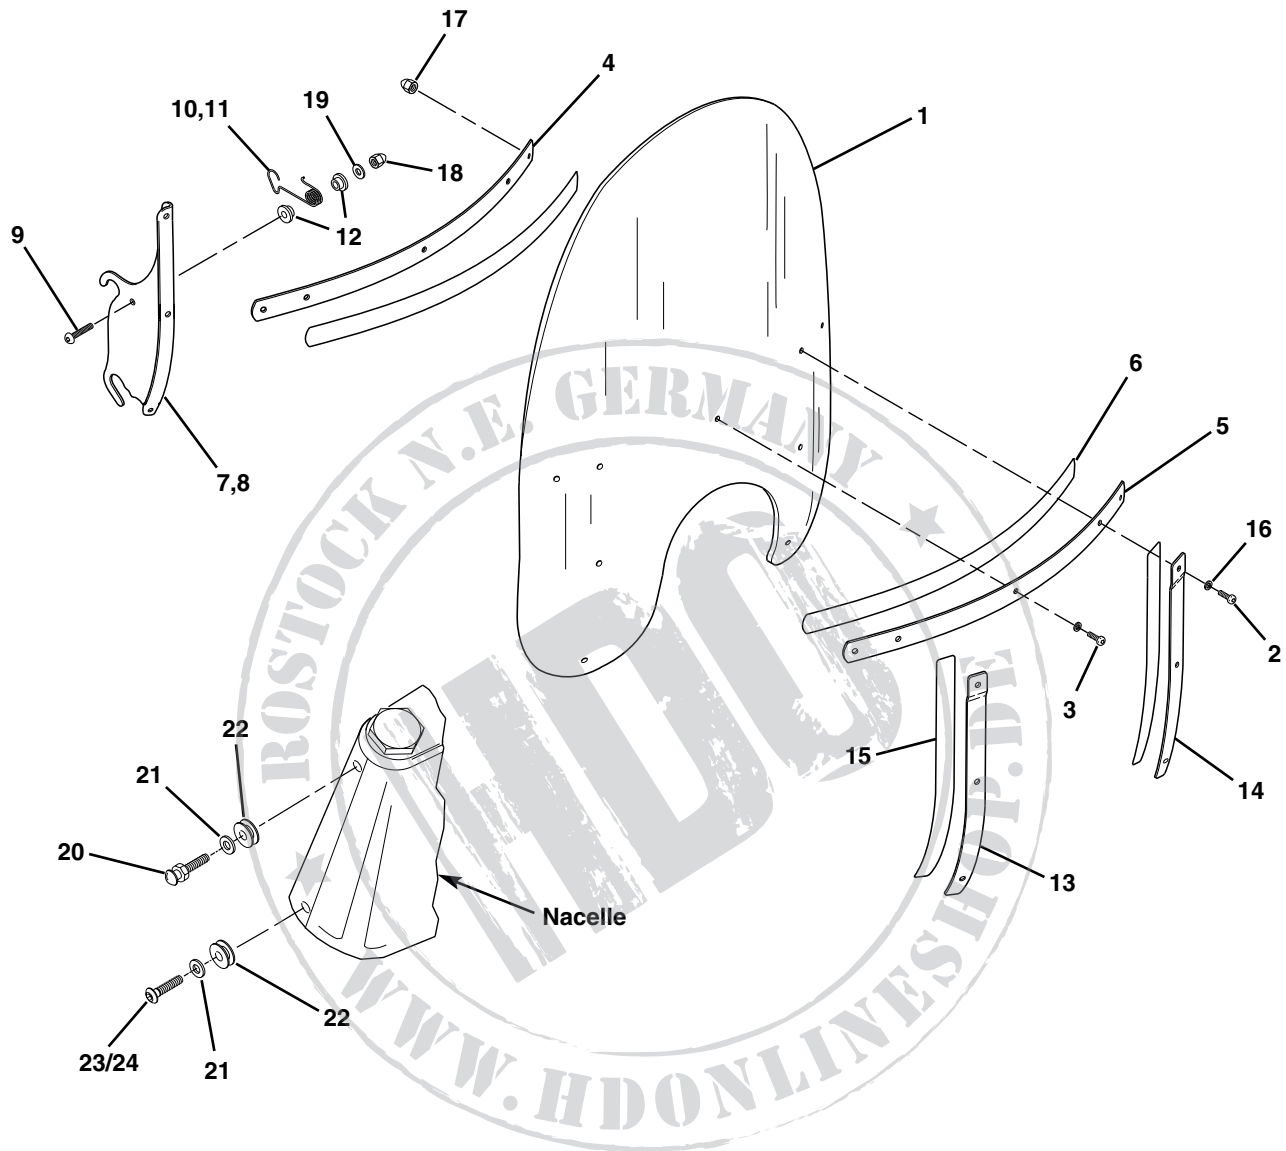

Item	Description	Part No.
1	Replacement windshield Standard height clear	58657-97A
	Low profile smoked	58658-97A
2	Panhead screws, Torx (2)	2444
3	Panhead screws, Torx (7)	2921
4	Inner windshield brace	58431-94
5	Outer windshield brace	58428-94
6	Windshield brace tape (2)	58416-77A
7	LH windshield bracket	58293-95
8	RH windshield bracket	58300-95
9	Buttonhead screws (2)	94426-95
10	LH windshield retainer	58259-95
11	RH windshield retainer	58266-95
12	Nylon bushings (4)	58272-95
13	RH brace	58406-75A
14	LH brace	58408-75A

Item	Description	Part No.
15	Windshield brace tape (2)	58417-77
16	Washers (9)	7073
17	Acorn nuts (9)	7651
18	Acorn nuts, 1/4-20 (2)	94004-90T
19	Flat washers, 1/4 in. (2)	94065-90T
Hardware consisting of:		
20	Screw, mushroom head (2)	58268-95
21	Washer (4)	94066-90T
22	Bushing (4)	67621-94
23	Screw, button head (2) 5/16 x 24 x 1 1/4	94421-95T
24	Screw, button head (2) 5/16 x 24 x 1	94398-92T